



Setup Instructions

Step 1: Attach the clamp onto the edge of a table and adjust it until the clamp is secure, then insert the magnifying lamp into the hole located at the top of the clamp

CAUTION: Carefully secure the lamp prior to removing the twist tie to prevent the spring balanced arm from swinging open

Step 2: Connect the power cable to the magnifying lamp (located near the base of the magnifying lamp) and plug it into an outlet



(If monitor inspection is not required, skip to step 4)

Step 3:

- Insert the Micro SD card into the magnifying lamp
- Connect the HDMI cable from the magnifying lamp to your monitor or use the USB cable for PC connectivity
- Remove the lens cap
- Remove the protective battery film from the remote

Step 4: Power on the magnifying lamp to turn on the magnifying lamp and monitor

(Unplug the USB cable before powering the device on or off)

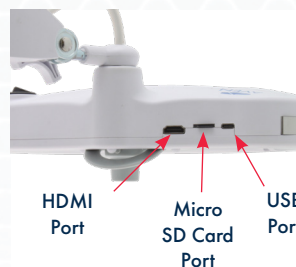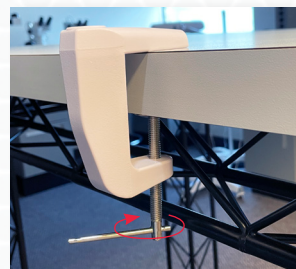

Getting Started



Tilt the camera to adjust the image on screen to your desired angle



View objects through the magnifying lens or the monitor














Adjust and lock the positioning of the lamp head with the adjustment knob



Adjust the color temperature and intensity of the LEDs on the magnifying lamp



-  Power on/off monitor functionality (while the magnifying lamp is on)
-  Capture an image on screen
-  View images/videos (press again to return to live mode)
-  Zoom in & out (on screen)
-  Display cross hair (adjust cross hair color and cross line in menu setup)
-  Make a selection
Play/Pause videos

-  Enter the menu screen to adjust setup (press again to leave the menu screen)
-  Press once to record (indicator light will blink) press again to stop recording
-  Delete image/video
-  (For PC mode) Toggle between live view, image library, and HDMI mode
-  Freeze the frame on screen while in live mode
-  Navigate through the menus with the arrow keys

Product Safety

- This device is not a toy, to prevent injury or damage to the magnifying lamp, keep out of reach of young children
- To prevent the risk of a fire or shock, do not operate in wet or humid environments
- Conserve energy by powering off the magnifying lamp when not in use